


EKOPOWER

Manual Professional wireless windsensors for Vantage Vue

sept 09

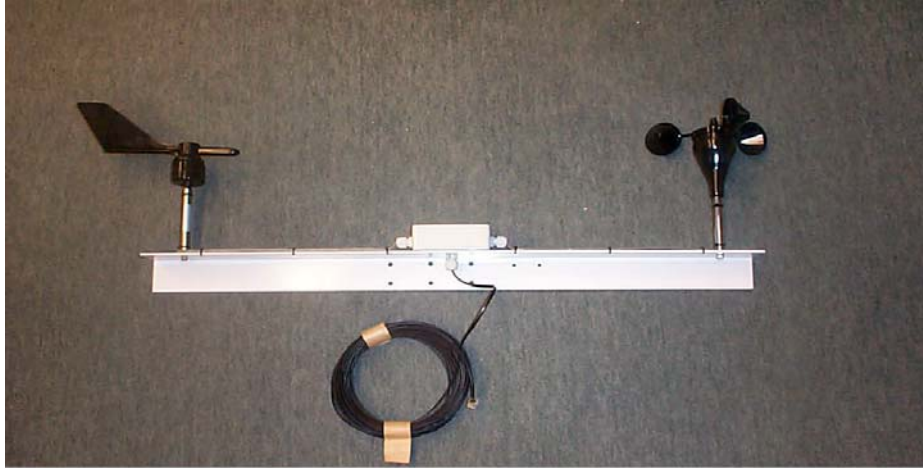

Required:

- Anemometer: MAX40+R
- Wind vane: DIR 21+
- Anemometer transmitter 6332OV
- Bracket (80 cm) with connection box, 12 meter cable (can be extended using extension cable and connector)
- 2 stainless steel u bolts for mast up to 40 mm (special mounting brackets for bigger mast sizes on request)

Mount the 6332OV anemometer transmitter not in top of the mast but at an accessible place.

Lead the wires from the anemometer/vane to the 6332OV unit.

See also also the additional instructions for selecting transmitter ID for 6332OV and VV console, which should be the same number.

1. Connections inside box: 4 wire cable with RJ connector (to plug in 6332OV transmitter)

Windvane:

Green.....Red
Brown.....Yellow
White.....Green

Anemometer:

Red.....Red
Black.....Black

Connections are pre-installed in waterproof cabinet using splice connectors.

2. Adjustment Vantage Vue console

select:

- setup mode
 - wind cups
 - OTHER
 - press SECOND, then SET and enter calibration number 388
 - press DONE
 - keep DONE pressed for 3 seconds to return to normal mode READY FOR USE!
- OPTION: For long distances repeater type 7627OV is recommended.